




How to Adapt a Protractor

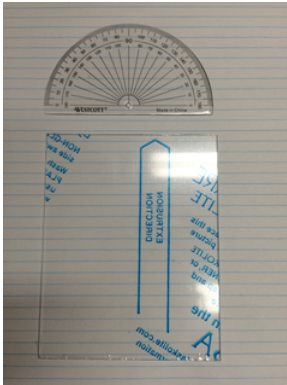


- use thin plexiglass (e.g: 0.05 inches, 1.27mm thick)
- cut the plexiglass to the width of the protractor

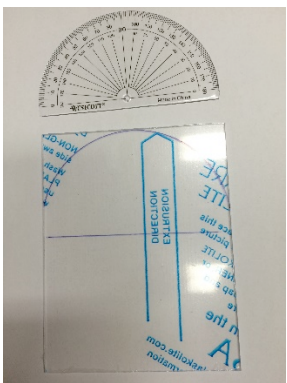

- mark the half-circular shape of the protractor on the protective sheet of the plexiglass

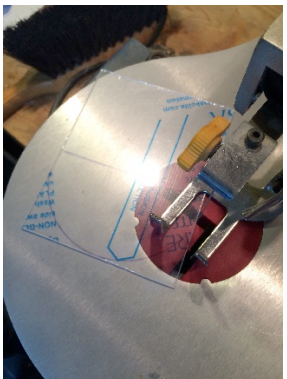


- cut the plexiglass to the half-circular shape of the protractor

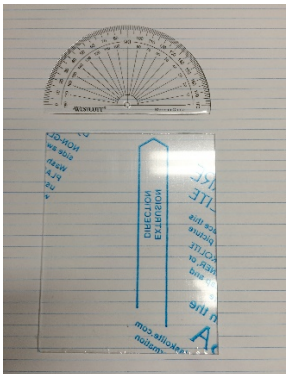

- trim the edge smooth




- use double-sided carpet tape

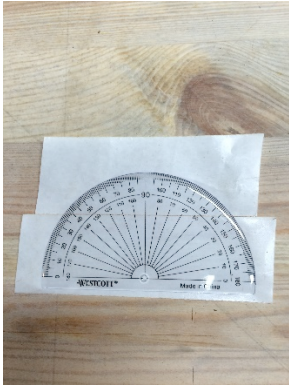


- cover the back of the protractor with the carpet tape
- trim the tape to the shape of the protractor



- remove the protective sheet on the plexiglass

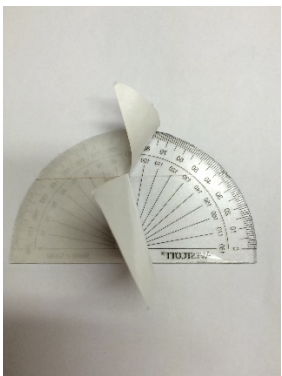

- remove the backing of the carpet tape

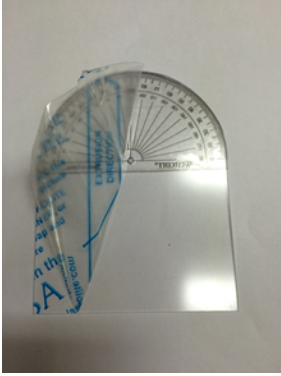

- carefully place the protractor on the plexiglass
- remove the protective backing on the back of the plexiglass
- clean up the edges if necessary